



Cat. No. 60-1169

## Party-Talk Play-Phone


Your Party-Talk Play-Phone looks and sounds like a real cellular phone. It has a touch-tone numbered keypad (complete with \* and # keys), and eight optional keys that let you hear a variety of messages. It even has a keypad cover you can flip down and an antenna you can pull up when you make your "calls."

**Note:** You need three AA batteries (not supplied) to power the phone (see "Installing Batteries" on Page 2).

When you "dial" a friend's number on the keypad and press **SND**, you hear real phone tones, then hear three rings before a friendly voice answers with a message. Or, press any of the other green keys for more phone fun!



The Party-Talk Play-Phone is easy to take with you — just flip the cover back up and push the antenna down.

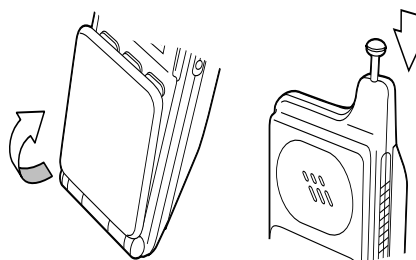

© 1997 Tandy Corporation.  
All Rights Reserved.

RadioShack is a registered trademark used by Tandy Corporation.

## INSTALLING BATTERIES


You need three AA batteries (not supplied) to power the phone. For the best performance and longest life, we recommend alkaline batteries, such as RadioShack Cat. No. 23-552.

### Cautions:


- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- Never leave dead or weak batteries in the phone. Batteries can leak and damage the phone's electronic parts.

Follow these steps to install the batteries.

1. Use a Phillips screwdriver to loosen the screw on the battery compartment cover.

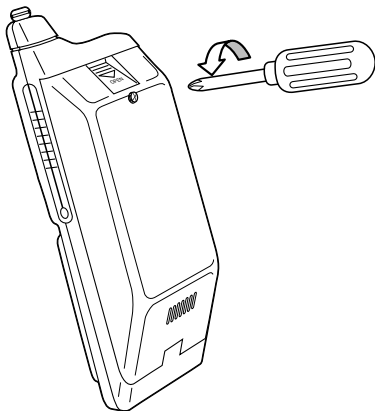

2. Press **OPEN** and carefully pull the battery compartment cover away from the phone.

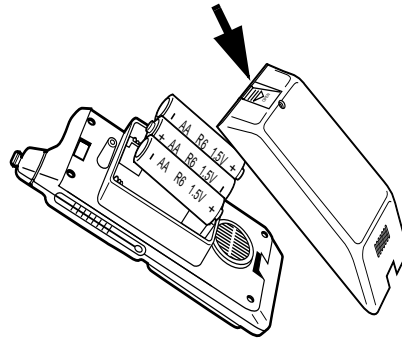

3. Put the batteries in the battery compartment as indicated by the polarity symbols (+ and -) marked inside.
4. Replace the cover (bottom end first) and secure it with the screw.

## USING THE PHONE

Indicator Light

Press **NO SVC** (no service) to hear the phone repeat a number, ring three times, then play a "no service" operator message.

Press **PAGING** for the indicator light to flash and the phone to ring three long rings, three times.

Press **REDIAL** to hear the phone repeat a number, ring three times, then repeat a message.

Flip the cover down to make "calls." Close it when you are finished.

Antenna — pull up or push down, just like a real cellular phone.

Press one of these two **MESSAGES** keys to hear a variety of messages.

Press **SND** (send) to hear the phone repeat a number, ring 3 times, then "send a message."

Press **END** to end your "call."

Press **BUSY** to hear a number dialed followed by a busy tone.

## MAINTENANCE

To enjoy your Party-Talk Play-Phone for a long time:

- Keep the phone dry. If it gets wet, wipe it dry immediately.
- Use and store the phone only in normal temperature environments.
- Keep the phone away from dust and dirt.
- Handle the phone gently and carefully. Don't drop it.
- Wipe the phone with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the phone's internal components can cause a malfunction and might invalidate its warranty. If your Party-Talk Play-Phone is not performing as it should, take it to your local RadioShack store for assistance.

### Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, Dept. W, 100 Throckmorton St., Suite 600, Fort Worth, TX 76102

*We Service What We Sell*

3/97

**RadioShack**  
**A Division of Tandy Corporation**  
**Fort Worth, Texas 76102**

7A7

Printed in Hong Kong